





Table of Contents

Installation Overview.....	1
Operating Systems.....	1
Prerequisites.....	1
Microsoft .NET Framework 4.8 or higher.....	1
FTDI D2XX Direct Drivers 2.12.36.20 or higher	1
Prerequisite Setup Wizard.....	2
Prerequisites	3
Installing Prerequisites	4
Extracting FTDI CDM Drivers.....	5
Device Driver Installation Wizard	6
License Agreement	7
Completing the Device Driver Installation Wizard.....	8
SENSIT® Test and Measurement Setup Wizard.....	9
End-User License Agreement	10
Select Installation Folder.....	11
Ready to Install.....	12
Installing SENSIT®	13
Completing the SENSIT® Setup Wizard	14
Release Information	15
Copyright	15
Disclaimer	15
Contact Information	15



Installation Overview

This installation guide outlines all the necessary steps to install SENSIT® Test and Measurement.

Operating Systems

SENSIT® Test and Measurement is intended for use with one of the following Windows operating systems.

- Windows 11
- Windows 10

Prerequisites

SENSIT® Test and Measurement requires the following prerequisites to be installed. The installation wizard will automatically prompt the user to install the prerequisites if they are not already installed.

Microsoft .NET Framework 4.8 or higher

Microsoft .NET Framework 4.8 can be downloaded from the manufacturer's website.

<https://dotnet.microsoft.com/download/dotnet-framework/net48>


FTDI D2XX Direct Drivers 2.12.36.20 or higher

FTDI D2XX Direct Drivers 2.12.36.20 can be downloaded from the manufacturer's website.

<https://ftdichip.com/drivers/d2xx-drivers/>

Prerequisite Setup Wizard

Click **Next** to continue.

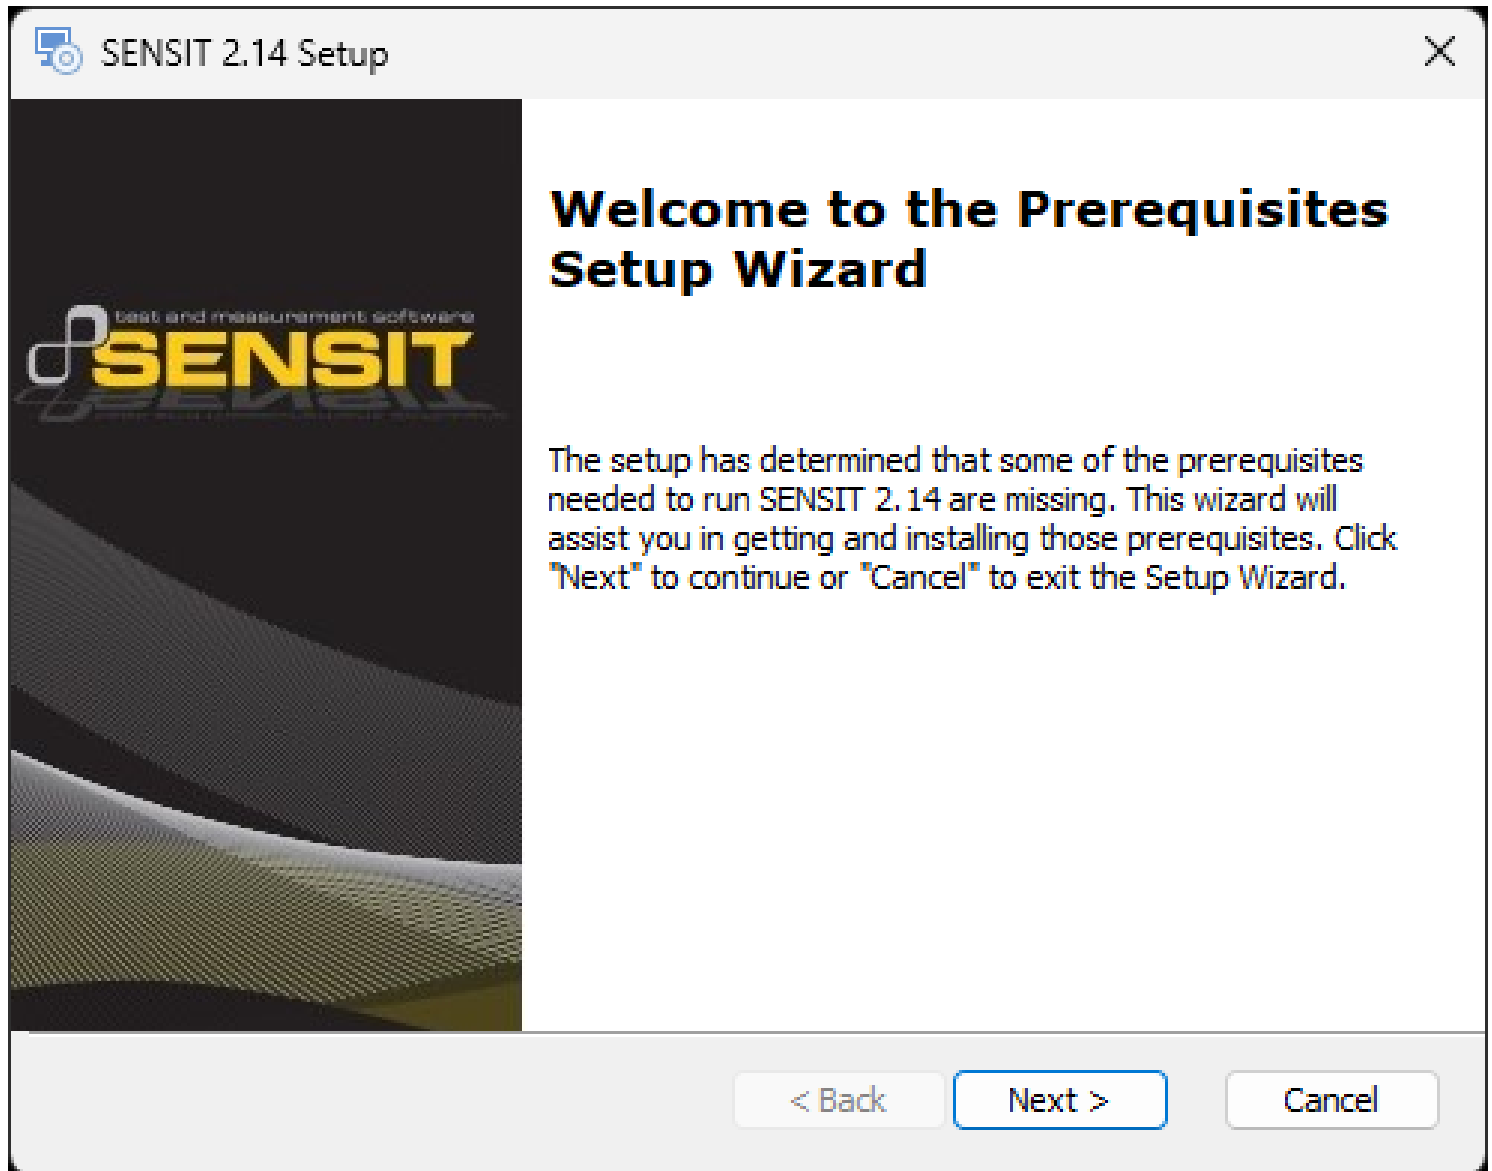



Prerequisites

Select all the prerequisites.
Click **Next** to continue.


Name	Required	Found	Action
☒ FTDI D2XX Direct Drivers			Install

< Back Next > Cancel



Installing Prerequisites


Prerequisites will be installed.

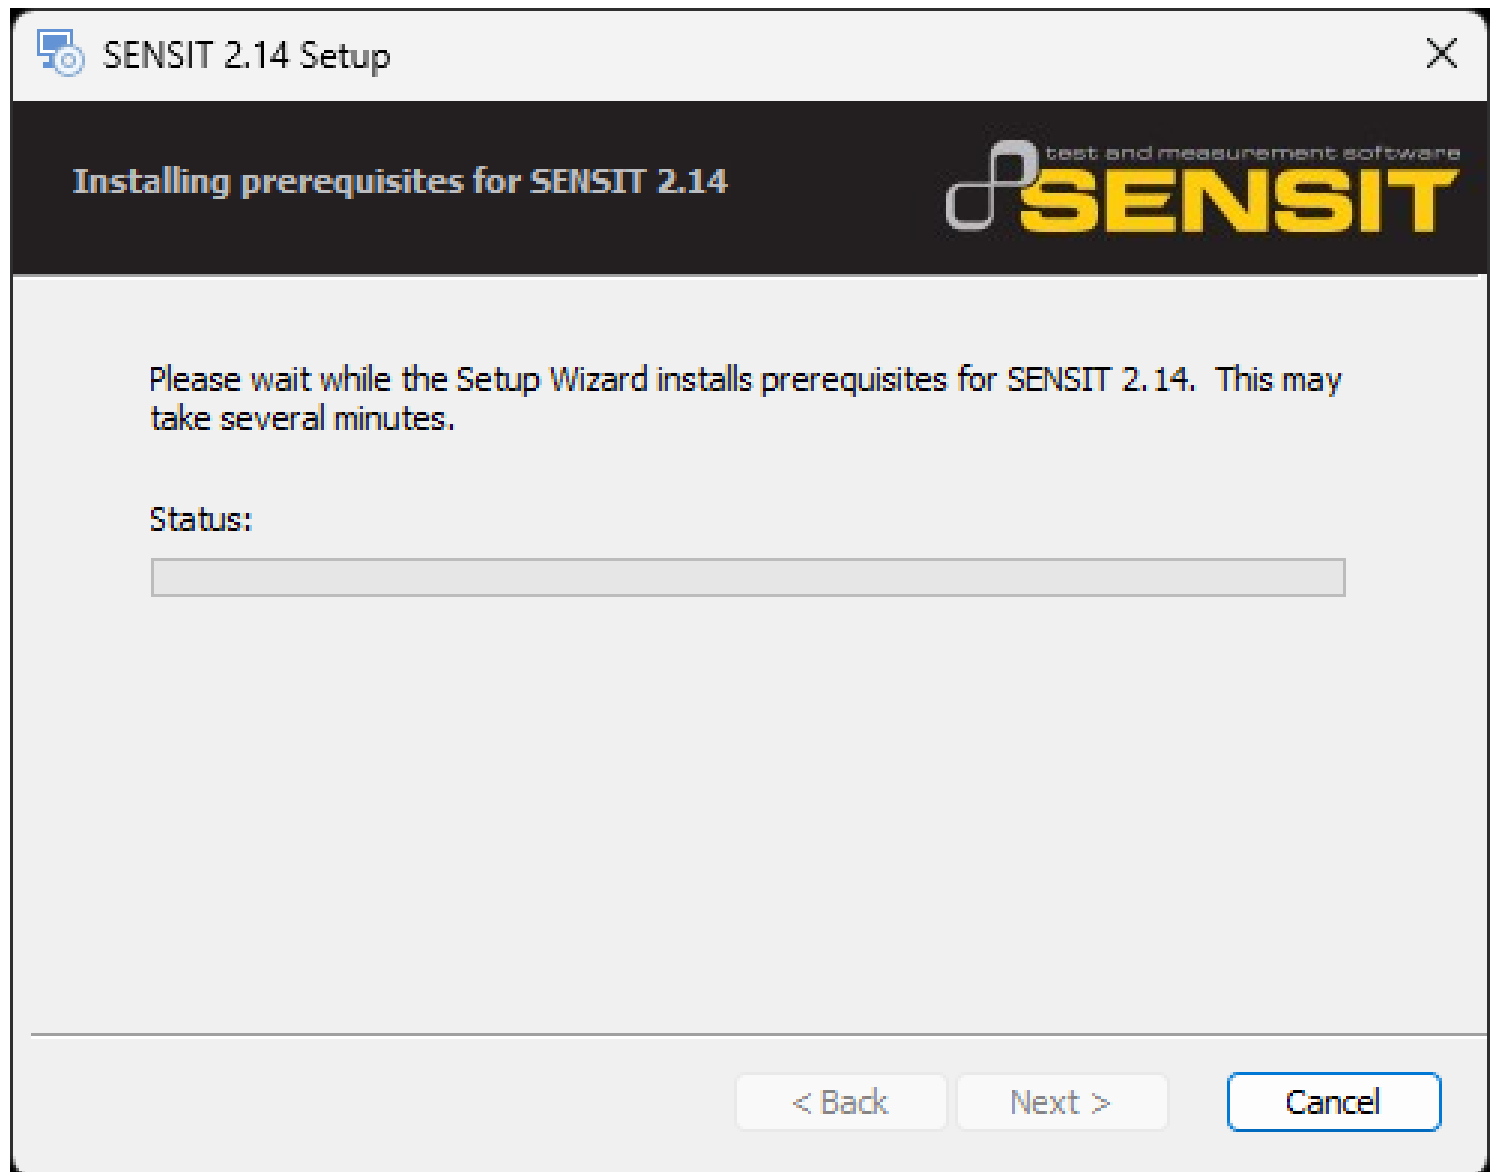



Extracting FTDI CDM Drivers


The FTDI CDM Drivers dialog will appear.
Click **Extract**.

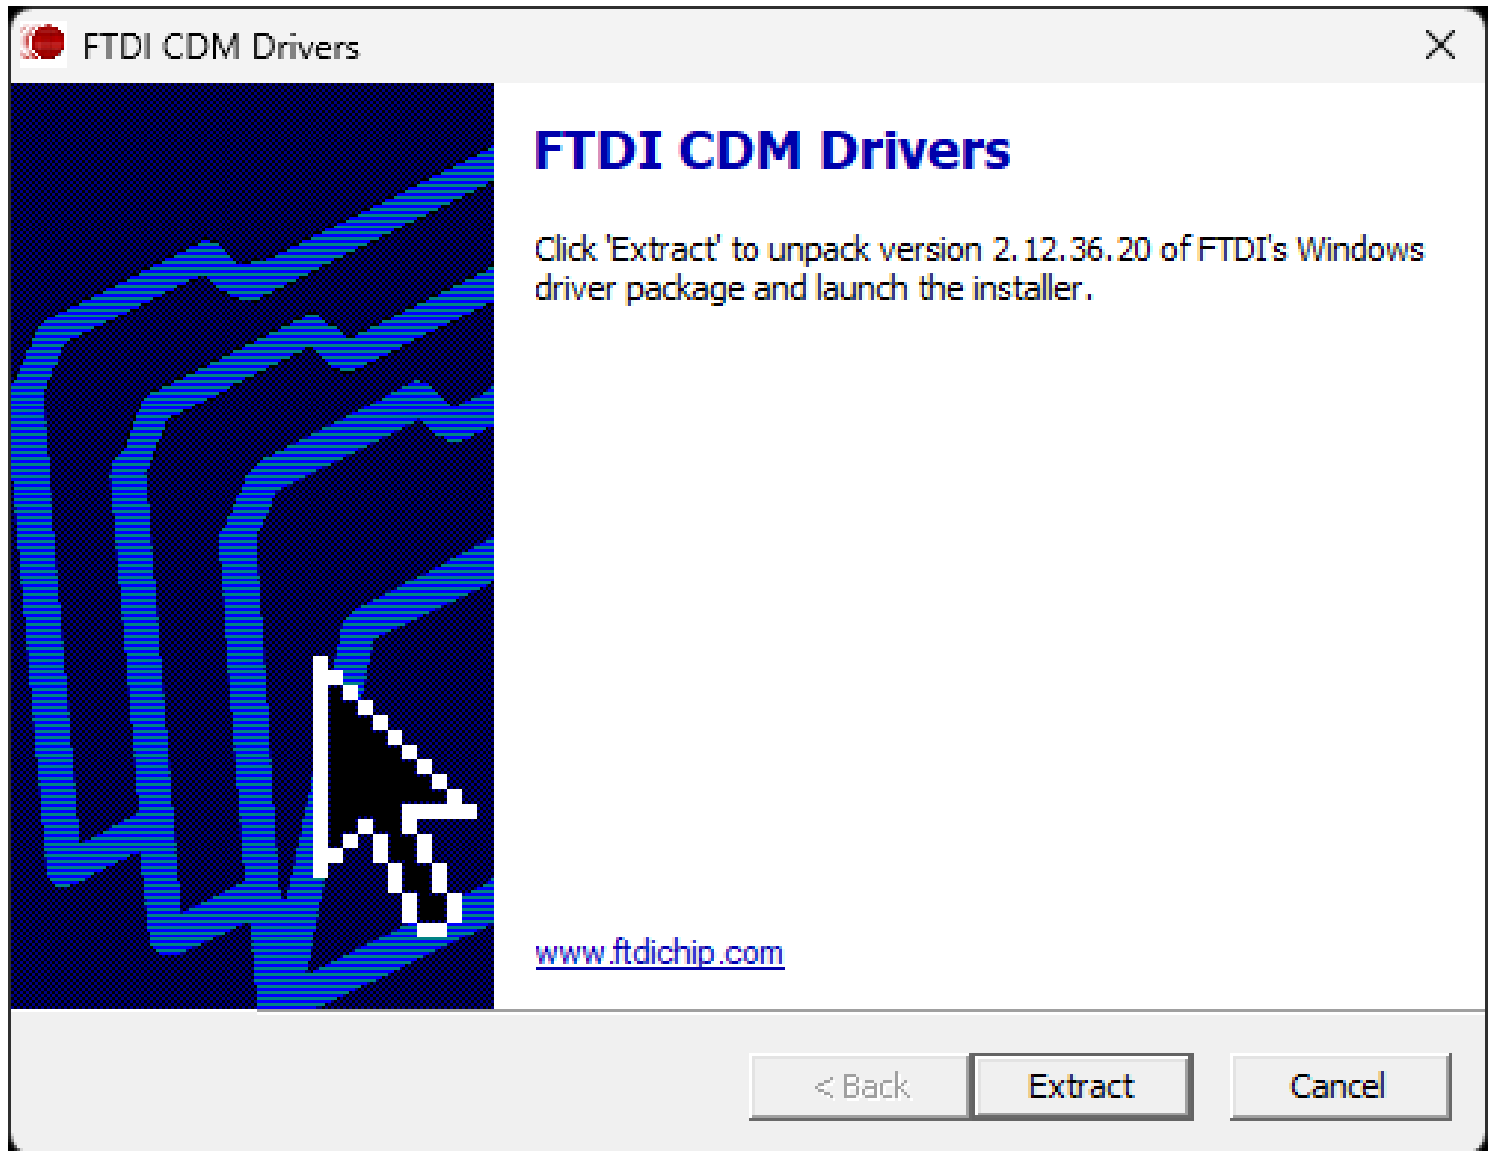



Device Driver Installation Wizard

Click **Next** to continue.

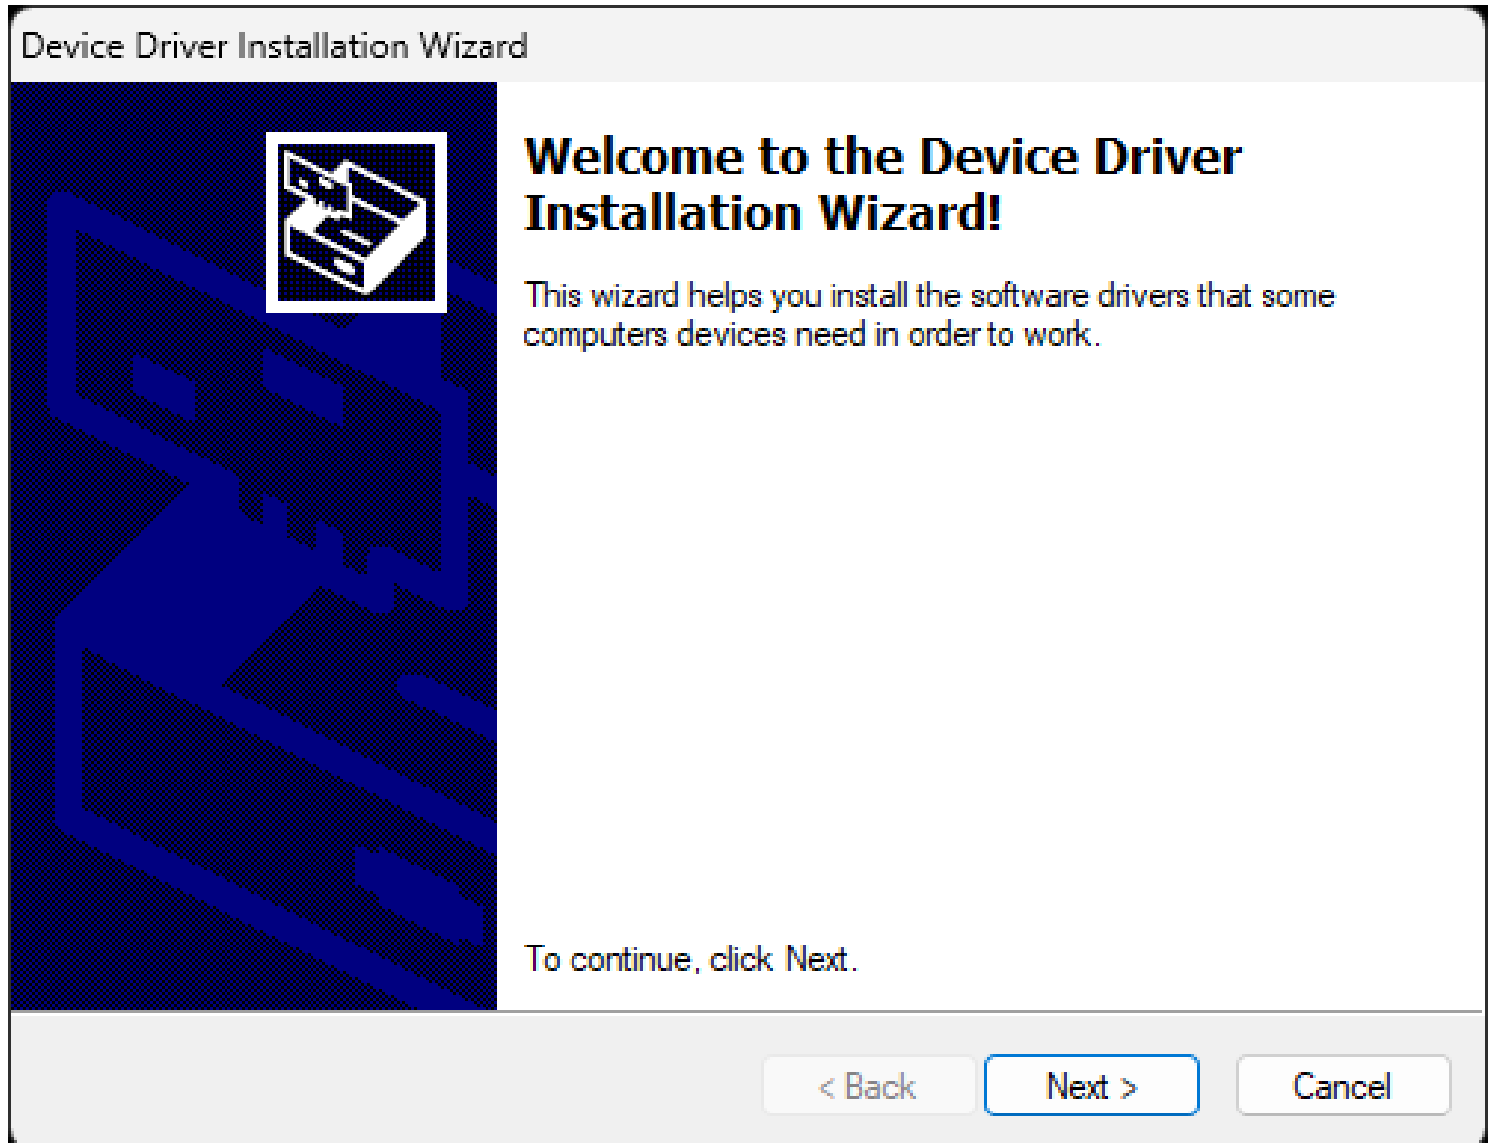



License Agreement

Select **I accept this agreement**.Click **Next** to continue.

Device Driver Installation Wizard

License Agreement



To continue, accept the following license agreement. To read the entire agreement, use the scroll bar or press the Page Down key.

IMPORTANT NOTICE: PLEASE READ CAREFULLY BEFORE INSTALLING THE RELEVANT SOFTWARE:
This licence agreement (Licence) is a legal agreement between you (Licensee or you) and Future Technology Devices International Limited of 2 Seaward Place, Centurion Business Park, Glasgow G41 1HH, Scotland (UK Company Number SC136640) (Licensor or we) for use of driver software provided by the Licensor(Software).

BY INSTALLING OR USING THIS SOFTWARE YOU AGREE TO THE


☒ I accept this agreement
☐ I don't accept this agreement

Save As Print

< Back Next > Cancel




Completing the Device Driver Installation Wizard

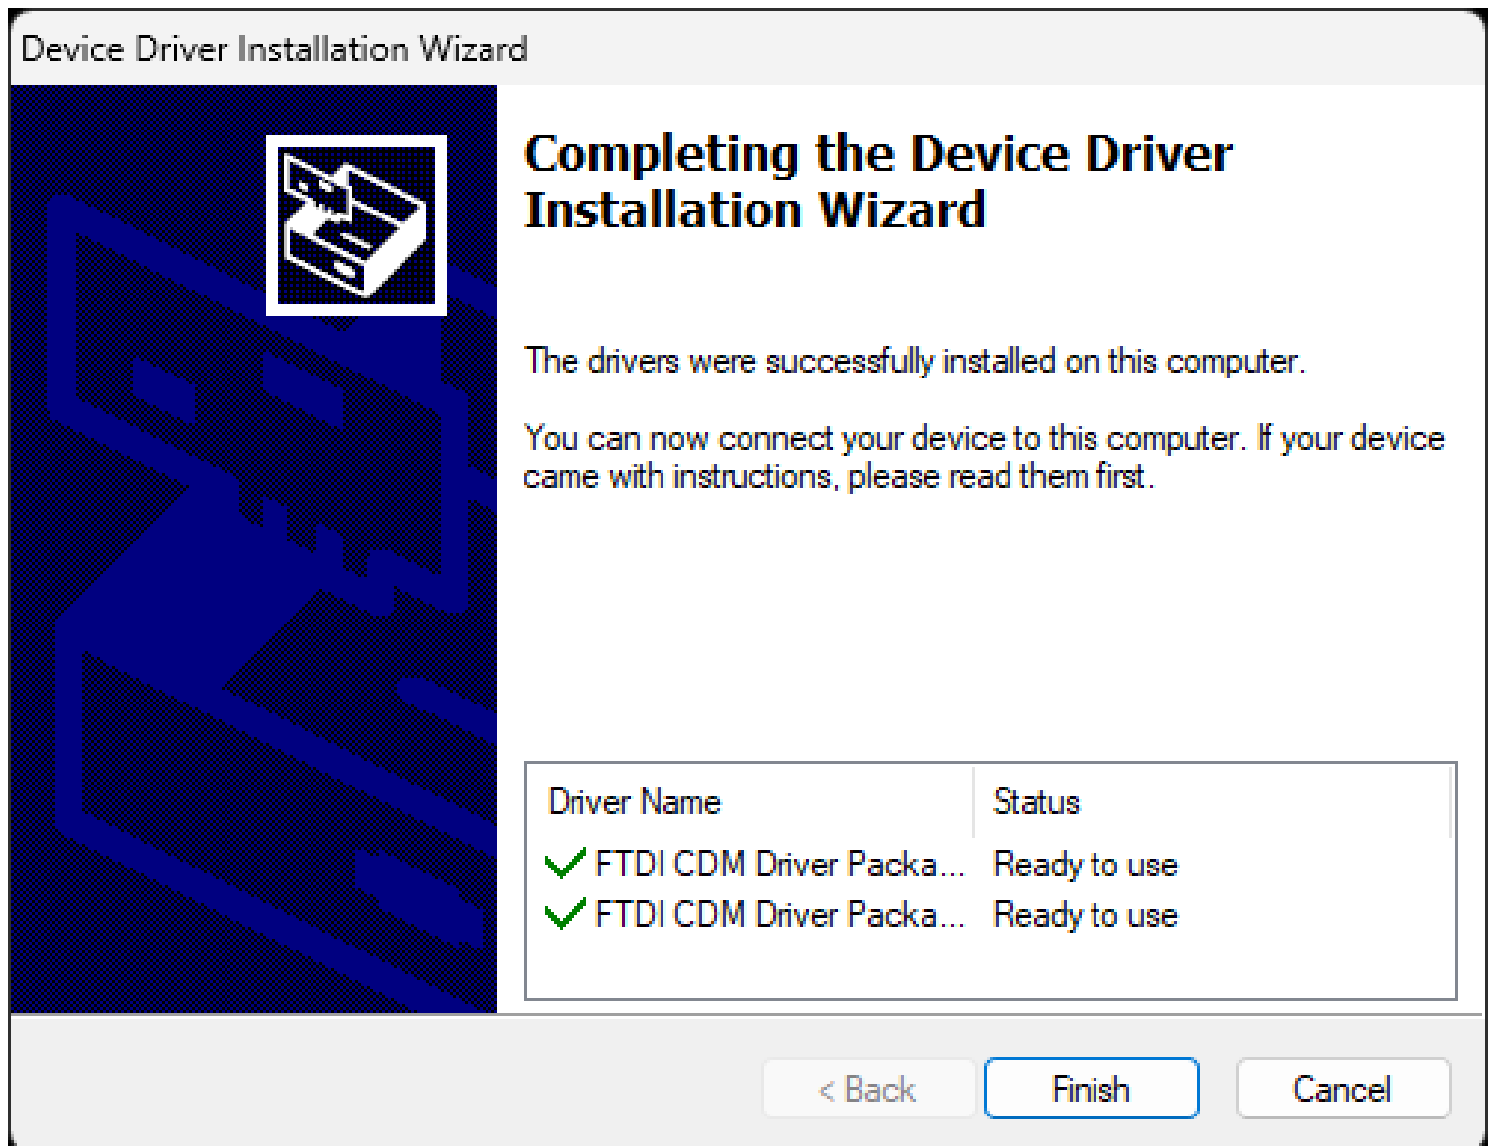Click **Finish**.



SENSIT® Test and Measurement Setup Wizard

Click **Next** to continue.

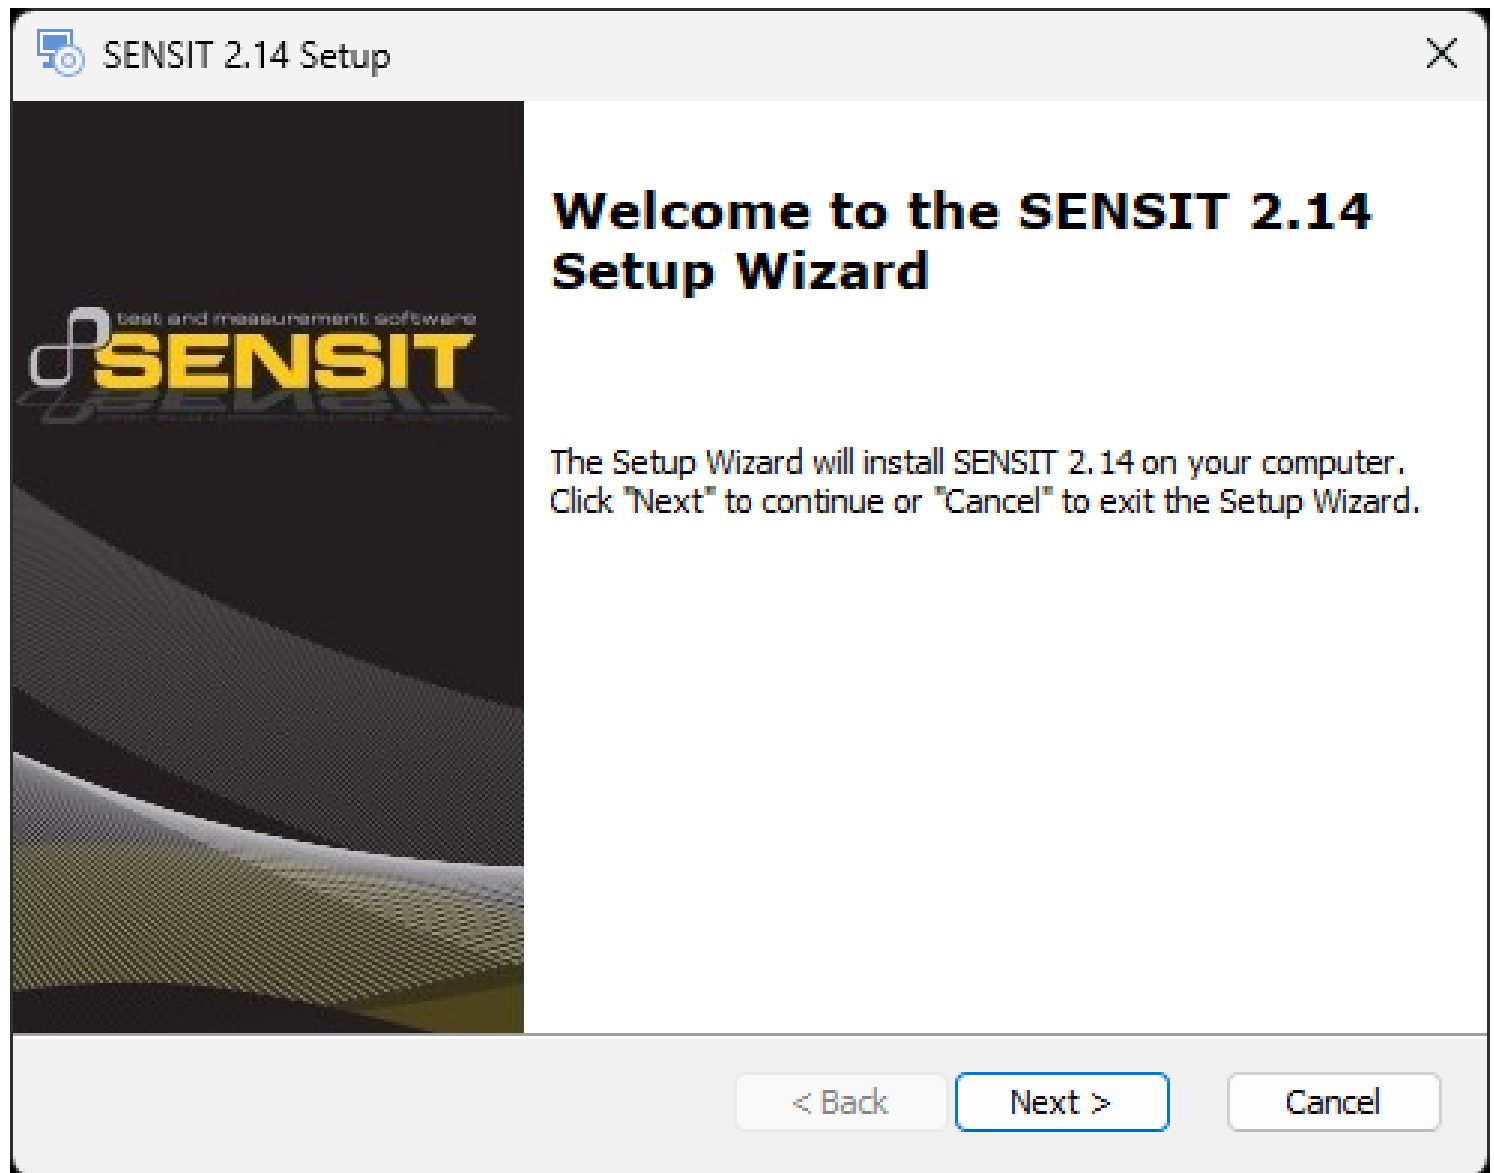



End-User License Agreement

Select **I accept the terms in the License Agreement**.
Click **Next** to continue.

The screenshot shows a window titled "SENSIT 2.14 Setup" with a close button in the top right corner. The window has a dark header bar with the text "End-User License Agreement" and "Please read the following license agreement carefully". To the right of this text is the SENSIT logo, which includes the text "test and measurement software" above the word "SENSIT" in a large, bold, yellow font. Below the header, there is a white box containing the title "End-User License Agreement for SENSIT® Test and Measurement Software". Inside this box, the text reads: "IMPORTANT PLEASE READ THE TERMS AND CONDITIONS OF THIS LICENSE AGREEMENT CAREFULLY BEFORE CONTINUING WITH THIS SOFTWARE INSTALL:". Below this, a paragraph states: "This End-User License Agreement ('Agreement') is a legal agreement between you (either an individual person or a single legal entity) ('You') and FUTEK Advanced Sensor Technology, Inc. Irvine, California ('FUTEK') for the software product(s) identified above which may include associated software components, media, printed materials, and online electronic documentation (collectively, 'Software Product'). By installing". Below the text box, there are two radio button options: "I accept the terms in the License Agreement" (which is selected) and "I do not accept the terms in the License Agreement". At the bottom of the window, there are three buttons: "< Back", "Next >" (which is highlighted with a blue border), and "Cancel".

SENSIT 2.14 Setup

End-User License Agreement
Please read the following license agreement carefully

End-User License Agreement for SENSIT® Test and Measurement Software

IMPORTANT PLEASE READ THE TERMS AND CONDITIONS OF THIS LICENSE AGREEMENT CAREFULLY BEFORE CONTINUING WITH THIS SOFTWARE INSTALL:

This End-User License Agreement ("Agreement") is a legal agreement between you (either an individual person or a single legal entity) ("You") and FUTEK Advanced Sensor Technology, Inc. Irvine, California ("FUTEK") for the software product(s) identified above which may include associated software components, media, printed materials, and online electronic documentation (collectively, "Software Product"). By installing


☒ I accept the terms in the License Agreement

☐ I do not accept the terms in the License Agreement

< Back Next > Cancel

Select Installation Folder

Click **Next** to continue.

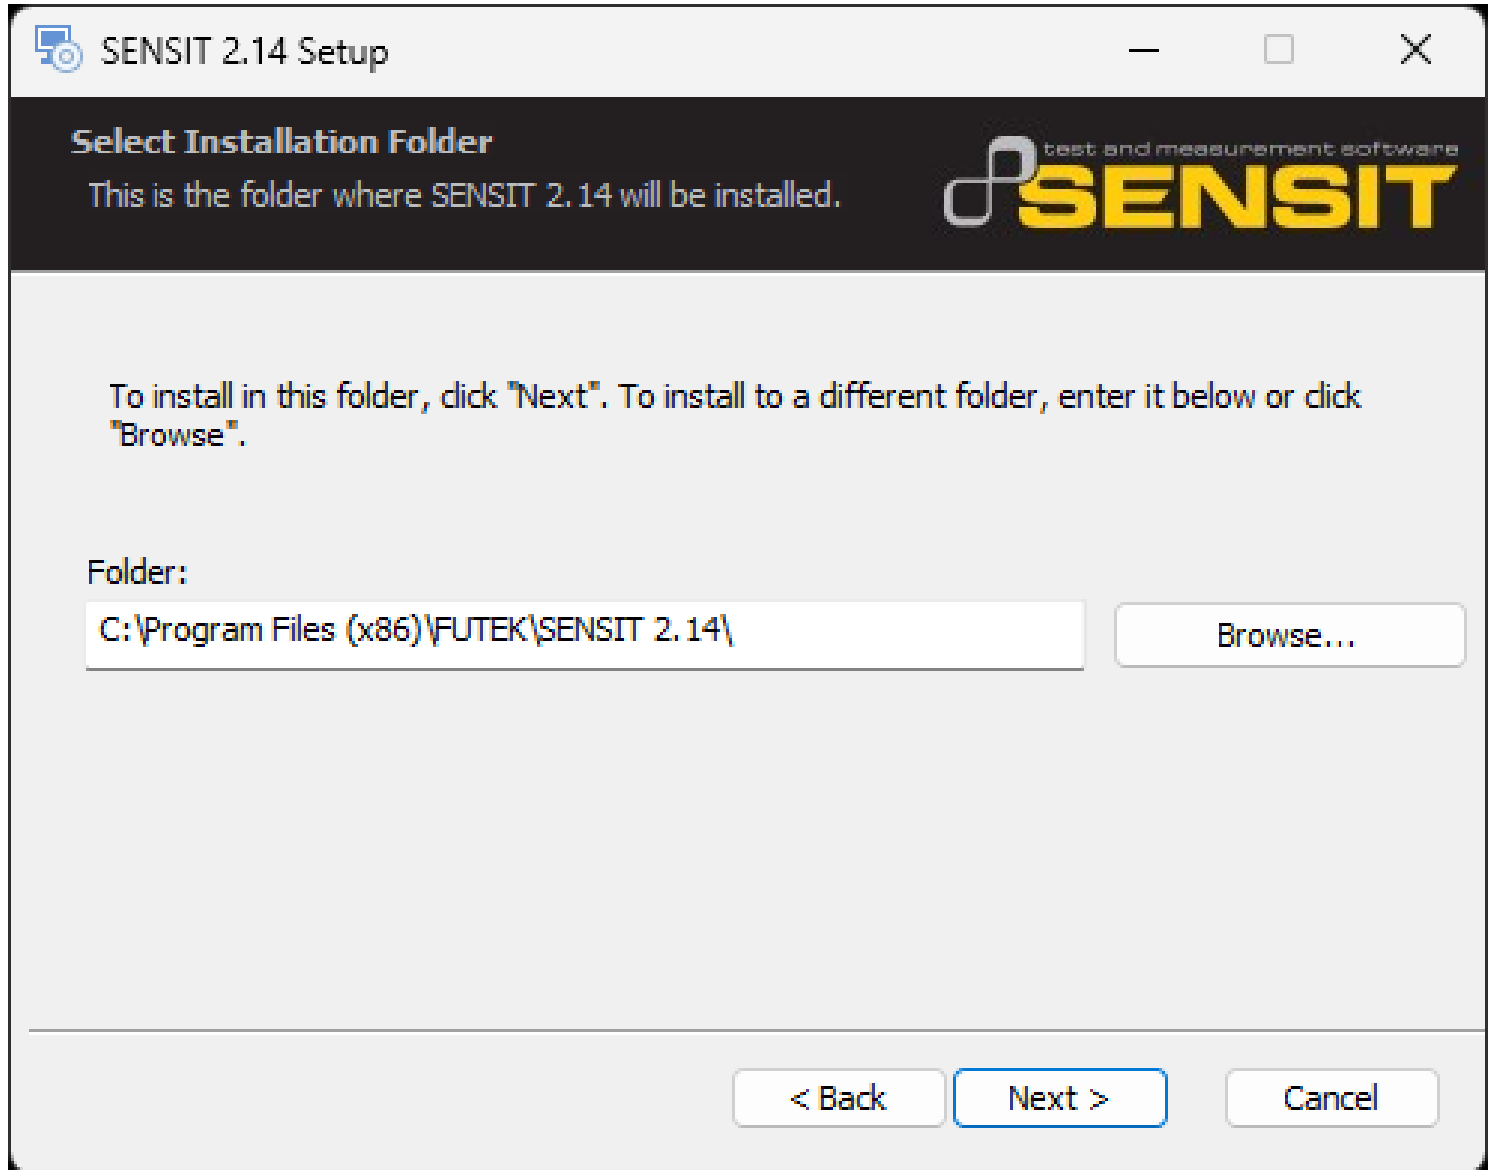

The screenshot shows a Windows-style window titled "SENSIT 2.14 Setup". The window has a dark header bar with the text "Select Installation Folder" and "This is the folder where SENSIT 2.14 will be installed." on the left, and the SENSIT logo on the right. The main area contains instructions: "To install in this folder, click 'Next'. To install to a different folder, enter it below or click 'Browse'." Below this is a text box labeled "Folder:" containing the path "C:\Program Files (x86)\FUTEK\SENSIT 2.14\" and a "Browse..." button. At the bottom, there are three buttons: "< Back", "Next >" (which is highlighted with a blue border), and "Cancel".

SENSIT 2.14 Setup

Select Installation Folder
This is the folder where SENSIT 2.14 will be installed.

test and measurement software
SENSIT

To install in this folder, click "Next". To install to a different folder, enter it below or click "Browse".


Folder:
C:\Program Files (x86)\FUTEK\SENSIT 2.14\ Browse...

< Back Next > Cancel




Ready to Install

Click **Install** to begin the installation.

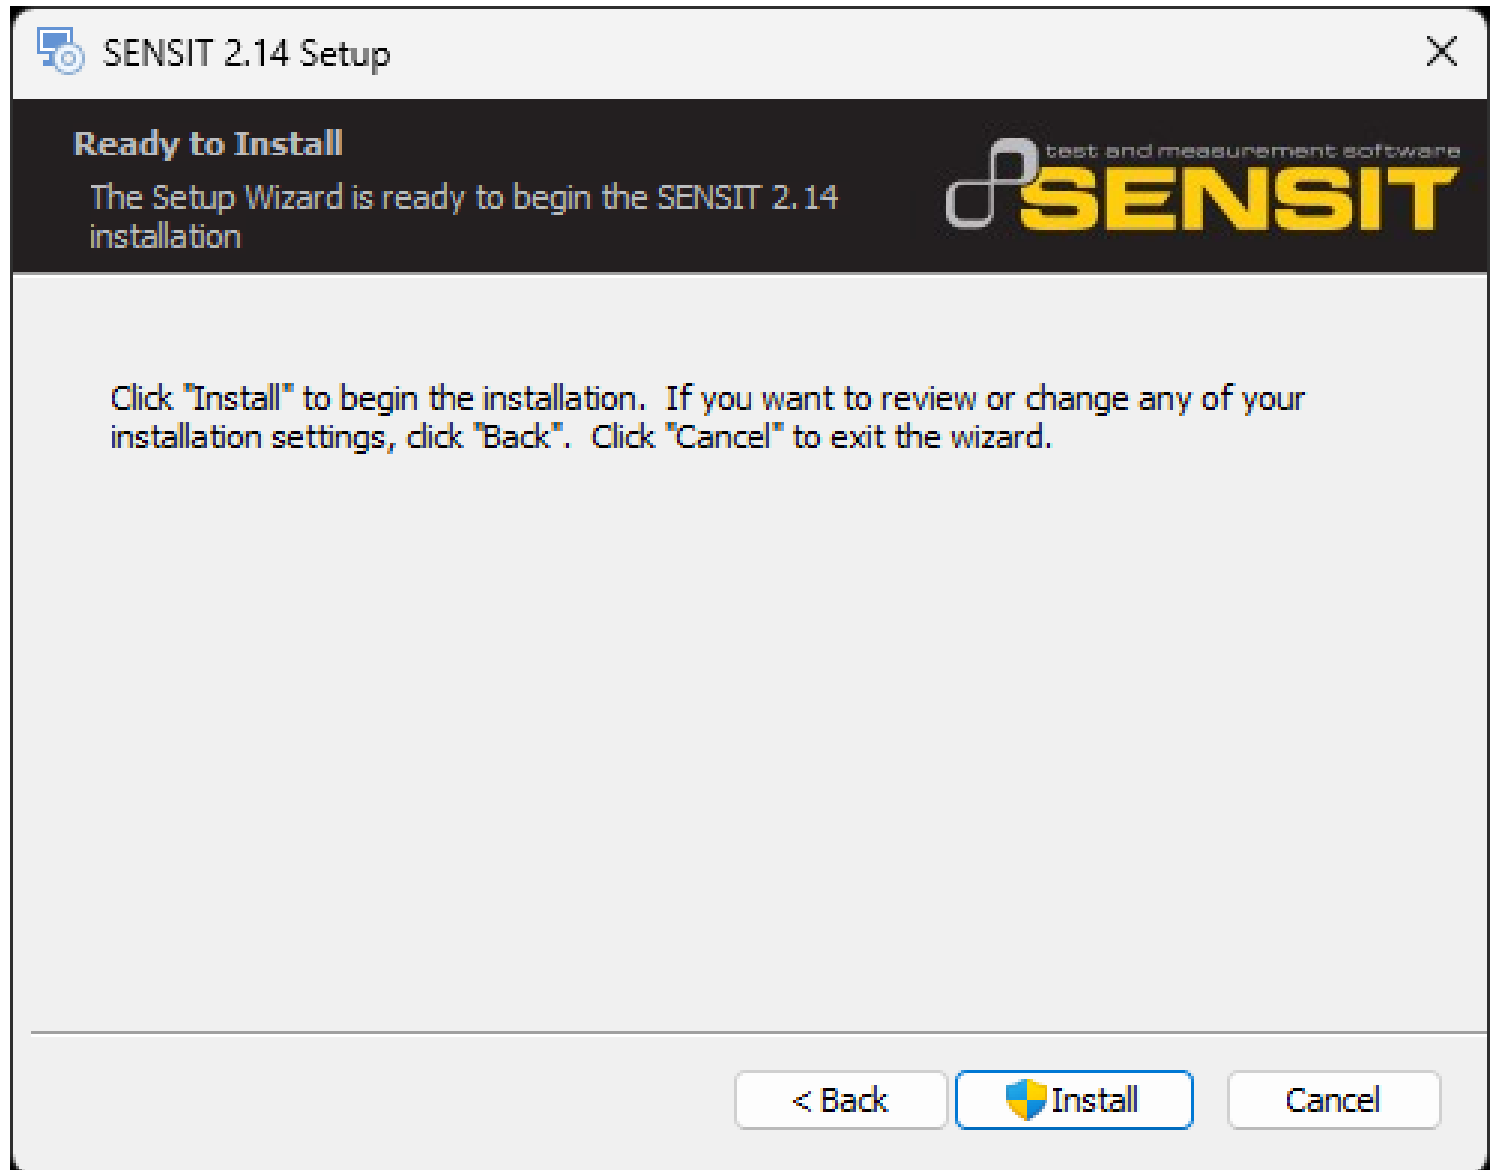


Installing SENSIT®

Wait for the wizard to finish.

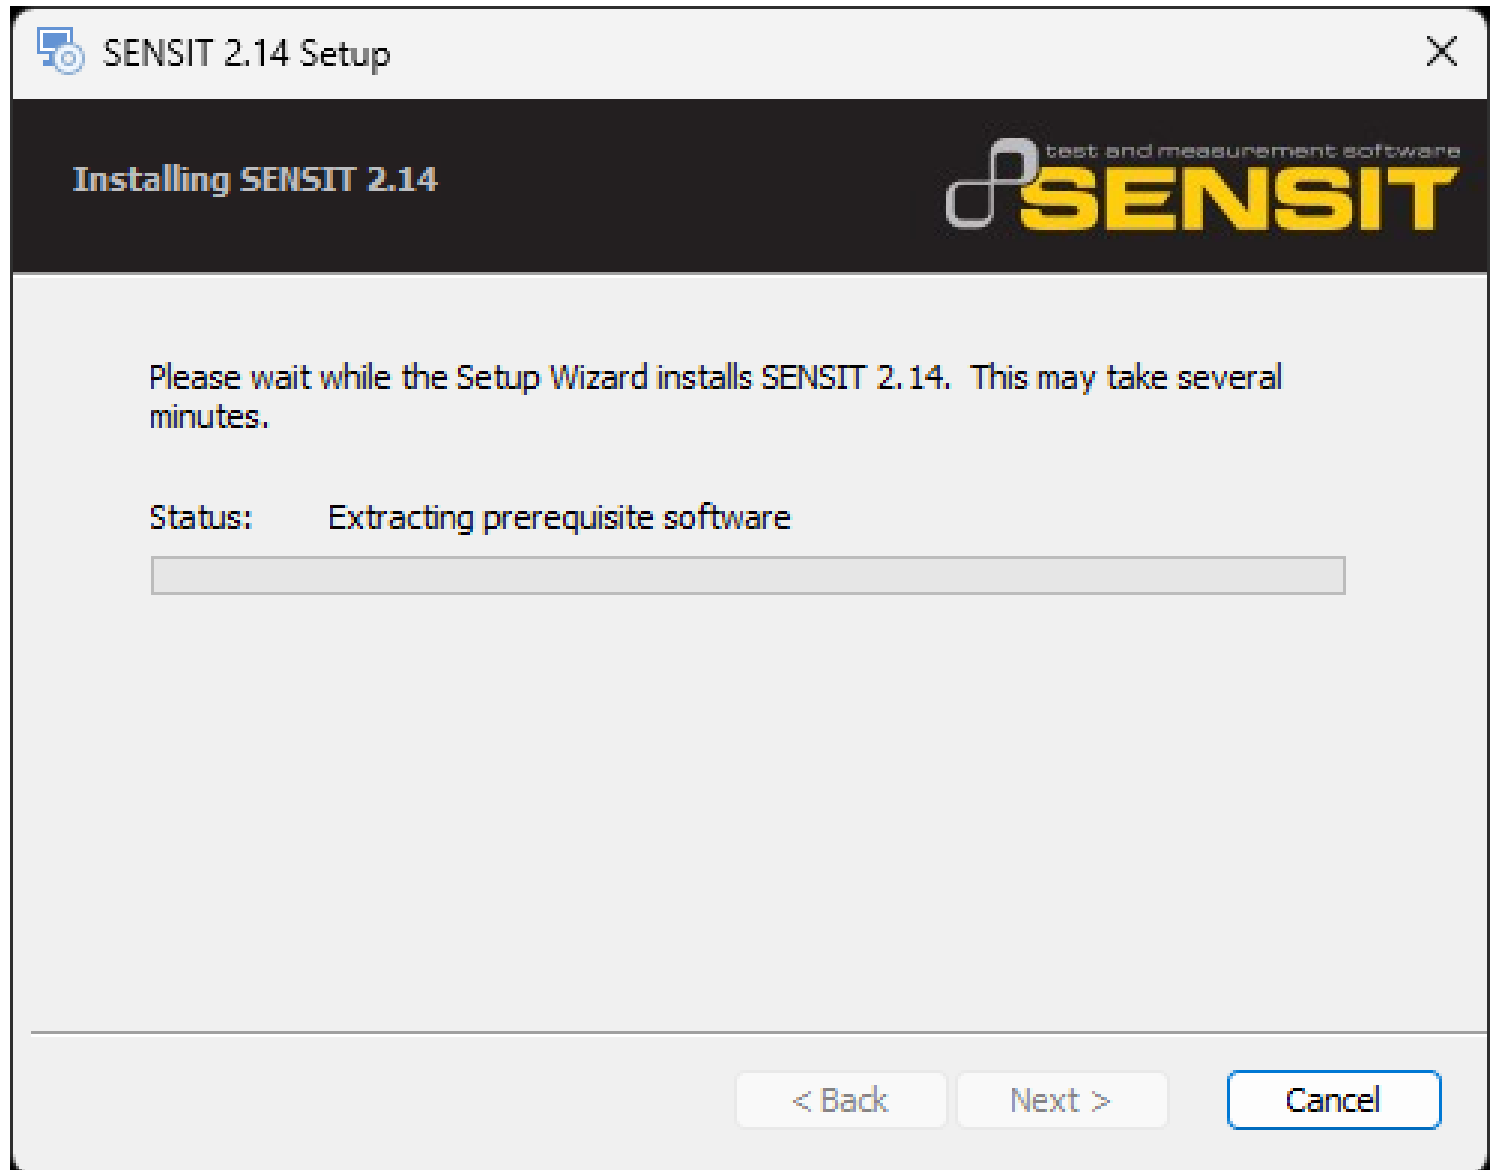

Completing the SENSIT® Setup Wizard

Click **Finish** to exit the Setup Wizard.

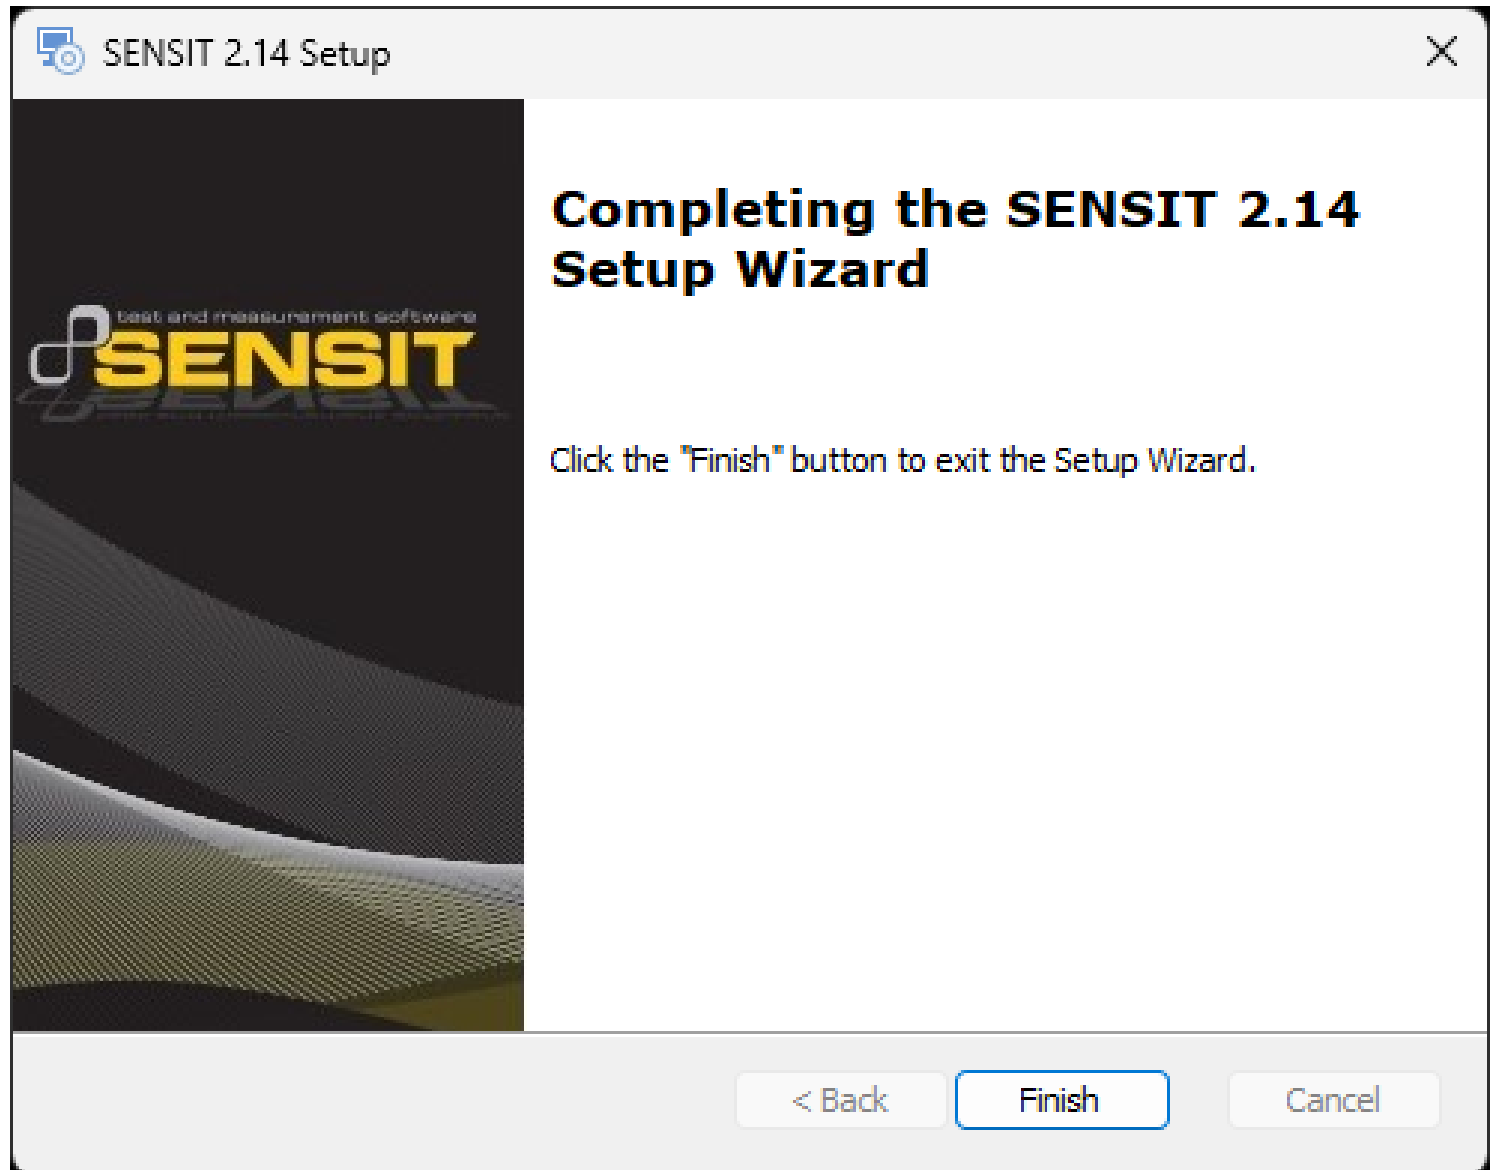



Release Information

SENSIT® 2.14 Installation Guide – Released July 2025

Copyright

© 2025 FUTEK Advanced Sensor Technology, Inc. All rights reserved.

Disclaimer

Neither the whole nor any part of the information contained in, or the product described in this manual, may be adapted, or reproduced in any material or electronic form without the prior written consent of the copyright holder.

This product and its documentation are supplied on an as-is basis and no warranty as to their suitability for any particular purpose is either made or implied.

This document provides preliminary information that may be subject to change without notice.

Contact Information

FUTEK Advanced Sensor Technology, Inc.

Headquarters

10 Thomas
Irvine, CA 92618

Business hours:
7 am – 5 pm Pacific

Phone: (949) 465-0900
Email: futek@futek.com
Website: www.futek.com